

## Thermoking Mp-4000



### **Defrosting**

The Unit is programmed to automatically defrost. You are not required to do anything.

### **Programming Temperature**

If nothing is displayed on the screen make sure genset is running, main circuit breaker is up in the on position; there is good plug connection and re press the power button on the face of the container. Press the F3 Button. Using F2 (up) and F3 (down) to select the desired setpoint. Hold the F4 button to accept. New setpoint will be displayed on the bottom right of the screen.

### **Alarm Codes**

**If the unit is malfunctioning or displaying any fault codes contact dispatch immediately.** Write up a defect report for any alarm or fault codes when you return to the yard.