

## Operating Container Reefer Units

### Daikin



### **Defrosting**

To defrost press the MANUAL DEFROST button on the top left corner of the key-pad. \*Note: The computer will know if defrost is necessary or not. If defrost does not begin, it is not required.

### **Programming Temperature**

If nothing is displayed on the screen, make sure Genset is running, main circuit breaker is up in the on position, there is good plug connection and unit ON/OFF button is set to ON. Press the menu button. When “setpoint” appears in the shaded column, press the ENTER button. The current setpoint will be display shaded. Once setpoint is selected, press ENTER button. When “Setpoint” appears highlighted in the menu, with the new setpoint to the left, press the ESC button to return to main display.

### **Alarm Codes**

**If the unit is malfunctioning or displaying any fault codes contact dispatch immediately.** Write up a defect report for any alarm or fault codes when you return to the yard.