

Smart Reefer



Defrosting

To defrost press the MODE button once. dEF will appear. Press the Enter Button once. LOAD will appear meaning the defrost cycle has begun. * Note; The computer will know if defrost is necessary or not. If defrost does not begin it is not needed.

Programming Temperature

To set temperature press the up and down arrows on the keypad until the desired temp is found. Once found press the enter button. LOAD will appear on the screen meaning your selection is being programmed.

Selecting Cycle Sentry (Stop/Start)/ Continuous operation

To choose between stop/start (cycle sentry) or continuous operation push the MODE button twice until CYCLS appears. Using the up and down arrow buttons select either YES or NO for cycle sentry operation and push the enter button. LOAD will appear meaning your selection is being programmed.

Alarm Codes

If screen is flashing or there is a ! symbol in a triangle to the right of the screen beside alarm, there is an alarm present. Push the alarm button (If there are multiple alarms you will have to push the alarm button multiple times). Observe the alarm number(s) being displayed record the code number(s). Press the clear button as many times as necessary to clear the code(s). Contact dispatch immediately and let them know what alarm(s) you cleared out, follow the instructions that they or the shop provide for you. **Note some alarms will not be able to be cleared. Write up a defect report for any alarm or fault codes when you return to the yard.