

Thermoguard uP IV

Defrosting

To defrost push and hold up on the manual defrost switch. The defrost symbol will appear beside the word defrost on the left side of the screen. * Note; The computer will know if defrost is necessary or not. If defrost does not begin it is not needed.

Programming Temperature

To set temperature press the up and down arrows on the keypad until the desired temp is found. Once found press the enter button. LOAD will appear on the screen meaning your selection is being programmed.

Selecting Cycle Sentry (Stop/Start)/ Continuous operation

To choose between stop/start (cycle sentry) or continuous operation with the on/off switch in the off position use the cycle sentry/continuous switch farthest to the right to select. Turn the on/off switch to the on position and wait if cycle sentry has been selected for the unit to start. If continuous mode has been selected hold down on the preheat/start switch for 30 seconds before pushing up on the start switch to ensure an easy start. * Note; unit will NOT start automatically in continuous. It must be manually started with the steps provided above.

Alarm Codes

If screen is flashing or there is a ! symbol in a triangle to the right of the screen beside alarm, there is an alarm present. Push the alarm button (If there are multiple alarms you will have to push the alarm button multiple times). Observe the alarm number(s) being displayed record the code number(s). Press the clear button as many times as necessary to clear the code(s). Contact dispatch immediately and let them know what alarm(s) you cleared out, follow the instructions that they or the shop provide for you. **Note some alarms will not be able to be cleared. Write up a defect report for any alarm or fault codes when you return to the yard.

