THERMO KING TRUCK, TRAILER, CR AND DAS ALARM CODES THIS DOCUMENT SHOWS ALL CURRENT TRUCK, TRAILER, CR AND DAS ALARM CODES. NOT ALL CODES ARE POSSIBLE ON ALL UNITS.

IF THE ALARM APPLIES TO A MULTI-TEMP ZONE, THAT ZONE WILL BE IDENTIFIED.

BE SURE TO RECORD ALL ALARMS THAT OCCUR. THEY ARE VALUABLE TO THE SERVICE TECHNICIAN.

THESE ARE SUGGESTIONS ONLY. ALWAYS CONSULT YOUR COMPANY FOR FINAL DECISIONS.

TAKE IMMEDIATE ACTION

ALARM CODE NUMBERS MARKED WITH PARTENTHESIS (XX) MAY EXIST WITH ALARM CODE 84 AND MAY CLEAR AUTOMATICALLY. **COLOR CODE DEFINITIONS OK TO RUN CHECK AS SPECIFIED**

Num	Color	Description	Operator Action
00		No Alarms Exist	No action required.
02		Check Evaporator Coil Sensor	Manually monitor temperature. Report alarm at end of day.
03		Check (Control) Return Air Sensor	Manually monitor temperature. Report alarm at end of day.
04		Check (Control) Discharge Air Sensor	Manually monitor temperature. Report alarm at end of day.
05		Check Ambient Temp Sensor	Report alarm at end of day.
06		Check Coolant Temp Sensor	Report alarm at end of day.
07		Check Engine RPM Sensor	Report alarm at end of day.
08		Unit Running on Coil Sensor	Manually monitor temperature. Report alarm at end of day.
(09)		High Evaporator Temperature	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(10)		High Discharge Pressure (or Temperature)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
11		Unit or Zone Controlling on Alternate Sensor	Manually monitor temperature. Report alarm at end of day.
12		Sensor or Digital Input Shutdown	Unit/zone cannot operate and is shut down. Repair immediately.
13		Sensor Check	Manually monitor temperature. Report alarm at end of day.
14		Defrost Terminated by Time	Report alarm at end of day.
15		Check Glow Plugs or Intake Air Heater	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
16		Manual Start Not Completed	Report alarm at end of day.
(17)		Engine Failed to Crank	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(18)		High Engine Coolant Temperature	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(19)		Low Engine Oil Pressure	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(20)		Engine (Vapor Motor CR) Failed to Start	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(21)		Cooling Cycle Check	Manually monitor temperature. Report alarm at end of day.
(22)		Heating Cycle Check	Manually monitor temperature. Report alarm at end of day.
23		Cooling Cycle Fault	Unit/zone cannot operate and is shut down. Repair immediately.
24		Heating Cycle Fault	Unit/zone cannot operate and is shut down. Repair immediately.
25		Alternator Check	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
(26)		Check Refrigeration Capacity	Manually monitor temperature. Report alarm at end of day.
(27)		Vapor Motor RPM High (CR)	Unit/zone cannot operate and is shut down. Repair immediately.
28		Pretrip or Self Check Abort	Report alarm at end of day.

THESE ARE SUGGESTIONS ONLY. ALWAYS CONSULT YOUR COMPANY FOR FINAL DECISIONS,

Report alarm at end of day.

Report alarm at end of day.

Manually monitor temperature. Report alarm at end of day.

Manually monitor temperature. Report alarm at end of day.

Manually monitor temperature. Report alarm at end of day.

Unit/zone cannot operate and is shut down. Repair immediately.

Unit/zone cannot operate and is shut down. Repair immediately

Unit/zone cannot operate and is shut down. Repair immediately.

If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.

If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.

If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.

Num	Color	Description	Operator Action
40		Check High Speed Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
41		Check Engine Coolant Temp	Report alarm at end of day.
42		Unit Forced to Low Speed	Report alarm at end of day.
43		Unit Forced to Low Speed Modulation	Report alarm at end of day.
44		Check Fuel System	Add fuel as necessary. Otherwise, report alarm at end of day.
45	_	Check Hot Gas or Hot Gas Bypass Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
46		Check Air Flow	Manually monitor temperature. Report alarm at end of day.
47		Remote Sensor Shutdown	Unit/zone cannot operate and is shut down. Repair immediately.
48		Check Belts or Clutch	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
49		Check Spare Sensor 1	Report alarm at end of day.
50		Reset Clock	Report alarm at end of day.
51		Check Shutdown Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
52		Check Heat Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
53		Check Economizer Valve Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
54		Test Mode Timeout	Clear alarm and restart unit.
55		Check Engine Speeds	Report alarm at end of day.
61		Low Battery Voltage	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
62		Ammeter Out of Calibration	Unit/zone cannot operate and is shut down. Repair immediately.
(63)		Engine or Vapor Motor Stopped	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
64		Pretrip Reminder	Report alarm at end of day.
65		Abnormal Temperature Differential	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
66		Low Engine Oil Level	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
67		Check Liquid Line Solenoid Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
68		Internal Controller Fault Code	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
70		Hourmeter Failure	Report alarm at end of day.
71		Hourmeter 4 Exceeds Set Time Limit	Report alarm at end of day.
72		Hourmeter 5 Exceeds Set Time Limit	Report alarm at end of day.
73		Hourmeter 6 Exceeds Set Time Limit	Report alarm at end of day.
74		Controller Reset to Defaults	Report alarm at end of day.
75		Controller RAM Failure	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
76		Controller EPROM Failure	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
77		Controller EPROM Checksum Failure	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
78		Data Log EPROM Failure	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
79		Internal Data Logger Overflow	Report alarm at end of day.
80		Check Compressor Temp Sensor	Report alarm at end of day.
81		High Compressor Temp	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
82		High Compressor Temp Shutdown	Unit/zone cannot operate and is shut down. Repair immediately.
83		Low Engine Coolant Temp	Report alarm at end of day.
84		Restart Null	Report alarm at end of day.
85		Forced Unit Operation	Report alarm at end of day.

Defrost Damper Circuit Check

Defrost Damper Stuck Closed

Check Oil Pressure Switch

Refrigeration Capacity Low Check Engine RPM

Check Modulation Circuit

Check Run Relay Circuit

Electric Phase Reversed

Check Water Valve Circuit

Electric Motor Failed to Run

Check Engine Coolant Level

29 30

31

32

33

34

35

(36)

37

38 39

Color	THESE ARE SUGGESTIONS ON Description Check Discharge Pressure Sensor Check Suction Pressure Sensor Reserved for CR Check Electronic Throttling Valve Circuit Electric Overload Check Electric Ready Input Sensor Grades Not Set Low Compressor Suction Pressure Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR) Check Fuel Level Sensor	It unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
Color	Check Discharge Pressure Sensor Check Suction Pressure Sensor Reserved for CR Check Electronic Throttling Valve Circuit Electric Overload Check Electric Ready Input Sensor Grades Not Set Low Compressor Suction Pressure Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	Report alarm at end of day. Report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Check Suction Pressure Sensor Reserved for CR Check Electronic Throttling Valve Circuit Electric Overload Check Electric Ready Input Sensor Grades Not Set Low Compressor Suction Pressure Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	Report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Reserved for CR Check Electronic Throttling Valve Circuit Electric Overload Check Electric Ready Input Sensor Grades Not Set Low Compressor Suction Pressure Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Check Electronic Throttling Valve Circuit Electric Overload Check Electric Ready Input Sensor Grades Not Set Low Compressor Suction Pressure Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Electric Overload Check Electric Ready Input Sensor Grades Not Set Low Compressor Suction Pressure Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Check Electric Ready Input Sensor Grades Not Set Low Compressor Suction Pressure Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Sensor Grades Not Set Low Compressor Suction Pressure Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Low Compressor Suction Pressure Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Check Loader #1 Circuit Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Check Loader #2 Circuit Low Fuel Level Failed Remote Return Air Sensor (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day. Add fuel as required.
	Low Fuel Level Failed Remote Return Air Sensor (CR)	Add fuel as required.
	Failed Remote Return Air Sensor (CR)	
	· /	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day
	Chack Fuel Level Sensor	in animizano is shar adminicipan inimodiardiy. Otherwise, report alarm at end of day.
		Report alarm at end of day.
	High Compressor Pressure Ratio	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
	Heater Fan Failure (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
	Controlling on Evap Coil Outlet Temp (CR)	Manually monitor temperature. Report alarm at end of day.
	Low Evaporator Coil Temperature (CR)	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
	Low Heater Fuel Level (CR)	Manually monitor temperature. Report alarm at end of day.
	Check Remote Fan Speed	Manually monitor temperature. Report alarm at end of day.
	Check Receiver Tank Press Sol Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
	Check Purge Valve Circuit	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
		If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
		Close doors. Report alarm at end of day.
		Replaced by Alarm Code 86
		If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
_		Report alarm at end of day.
	<u> </u>	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
		Manually monitor temperature. Report alarm at end of day.
		Unit/zone cannot operate and is shut down. Repair immediately.
		If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
	-	Report alarm at end of day.
	<u> </u>	Normal operation – does not affect performance.
		Normal operation – does not affect performance.
	Reserved for CR	The state of the s
		If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
		If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
	, ,	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
		Manually monitor temperature. Report alarm at end of day.
		Report alarm at end of day.
		If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
	, , ,	Manually monitor load temperature. Report this alarm at the end of the day.
		Be sure setpoint is adjusted to required temperature.
	· · · · · · · · · · · · · · · · · · ·	Report alarm at end of day.
		Report alarm at end of day.
	v	Report alarm at end of day.
		Low Evaporator Coil Temperature (CR) Low Heater Fuel Level (CR) Check Remote Fan Speed Check Receiver Tank Press Sol Circuit Check Purge Valve Circuit Check Condenser Inlet Sol Circuit Door Open Timeout Check High Discharge Pressure Sensor Check Suction Line Sol Circuit Unit Not Configured Correctly Check Remote Fans Check Electric Heat Circuit Multiple Alarms - Can Not Run Check High Pressure Cut Out Switch Check High Pressure Cut In Switch Auto Switch from Diesel to Electric

THESE ARE SUGGESTIONS ONLY	ALWAYS CONSULT YOU	R COMPANY FOR FINAL DECISIONS

Num	Color	Description The Secription	Operator Action
131		Electric Run Time Maint Reminder #2	Report alarm at end of day.
132		Total Unit Run Time Maint Reminder #1	Report alarm at end of day.
133		Total Unit Run Time Maint Reminder #2	Report alarm at end of day.
134		Controller Power On Hours	Report alarm at end of day.
135		Check Spare Digital Inputs	Report alarm at end of day.
136		Check Spare Digital Outputs	Report alarm at end of day.
137		Check Damper Motor Heater Output	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
138		Log DAS Real Time Clock Battery Failure (DAS)	Report alarm at end of day.
139		Abort Evacuation Mode	Report alarm at end of day.
140		Not currently used	
141		Auto Switch Diesel to Electric Disabled	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
142		Check Thermax Valve	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
143		Check Remote Zone Drain Hose Heater Output	Report alarm at end of day.
144		Lost CAN Communications to Expansion Module	Unit/zone cannot operate and is shut down. Repair immediately.
145		Lost Controller ON Feedback Signal	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
146		Software Version Mismatch	Report alarm at end of day.
147		Check Multi-Temp Fan Speed Control Output	Manually monitor load temperature. Report this alarm at the end of the day.
148		Auto Switch Electric to Diesel Disabled	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
149		Alarm Not Identified	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
150		Sensor Out of Range Low (DAS and HMI)	Report alarm at end of day.
151		Sensor Out of Range High (DAS and HMI)	Report alarm at end of day.
152		DAS Failed Sensor (DAS)	Report alarm at end of day.
153		Expansion Module Flash Load Failure	Report alarm at end of day.
154		Low Suction Pressure Switch Failure	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
155		Lost CAN Communications to HMI	Unit/zone cannot operate and is shut down. Repair immediately.
156		Check Suction/Liquid Heat Exchanger Bypass Valve	If unit/zone is shut down repair immediately. Otherwise, report alarm at end of day.
157		OptiSet Plus Profile Mismatch	Report alarm at end of day.
158		Primary Software Failed to Load	Report alarm at end of day.
159		Check Battery Condition	Report alarm at end of day.
160		Lost CAN Communications to Radio Expansion Board	Report alarm at end of day.
161		Log DAS Real Time Clock Invalid (DAS)	Report alarm at end of day.
188		Log DAS Microprocessor Fault (DAS)	Report alarm at end of day.
203		Check Display Return Air Sensor	Manually monitor temperature. Report alarm at end of day.
204		Check Display Discharge Air Sensor	Manually monitor temperature. Report alarm at end of day.
216		Check DAS Digital Inputs (DAS)	Report alarm at end of day.
234		Check Relative Humidity Sensor Circuit	Report alarm at end of day.
250		DAS Clock Time Reset (DAS)	Report alarm at end of day.
251		Check Radio Expansion Board Configuration	Report alarm at end of day.
252		Check Auto Fresh Air Exchange Circuit	Report alarm at end of day.