

Thermoking SG Gensets



Start Up

Push the Power switch up to allow the auto start feature to supply the proper amount of preheat to start the engine. This could take a couple minutes.

Operation

Once the unit is running it will need to run until the operating temperature of 90 Degrees is reached before it will supply power to the container unit.

This unit also has an automatic low and/or high idle setting. It will run at different RPM's depending on the amount of power required at the time. It is normal for it to change engine speed, this is a feature of this style of genset.

Alarm Codes

If the unit is malfunctioning or displaying any fault codes contact dispatch immediately. Write up a defect report for any alarm or fault codes when you return to the yard.